

IMT BEAD BREAKER




IMT 210 BEAD BREAKER

The IMT 210 Bead Breaker for ag and industria! use workson all types of rims including tractor, truck, grader andimplement tires. Smooth, dependable air/hydraulic action breaks inside and outside beads in minutes.

Not recommended for giant earthmover rim and tire assemblies.

Part#	Description
IMT210H	Bead Breaker Head
IMT200	1.25 qt Hydraulic Pump
IMT210	Bead Breaker Set

10625 & 10626 - Parker Couplings

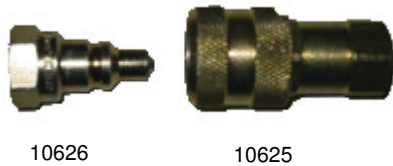

Standard coupling on IMT tools. Quick connect style. 10,000 psi rated.

Part#	Description
ESC10625	Hose Half Coupler
ESC10626	Ram Half Coupler

IMT DUAL TIRE BEAD BREAKER



The IMT 300 Dual Bead Breaker requires only 4-1/2 inches of operating space and is designed for ag and industrial applications. 10,000 pounds of pushing force permits breaking inside beads on outside dual farm tractor tires and backside beads in tight areas. The IMT 300 dual bead breaker extends to a full 12-inch working width.

Part#	Description
IMT300	Dual Tire Bead Breaker
IMT200	1.25 qt Hydraulic Pump

IMT MULTIPIECE BEAD BREAKER



IMT's 1800 Multipiece Rim Bead Breaker is designed for unseat- ing tire beads on 24- to 63-inch diameter OTR earthmover rims withpny pockets. The bead breaker assembly hydraulically pushes therim flange away from the bead-seat band or rim base forcing thetire bead off the bead-seat. Two model 1800 bead breakers canbe used together on larger rims or to assist with difficult changes.


Part#	Description
IMT1800	Multipiece Bead Breaker
IMT200	1.25 qt Hydraulic Pump

OTR & TRACTOR TIRE EQUIPMENT



WONDER PUMP


- . Pumps 30 gallons of calcium chloride per minute.
- . Spring reinforced hoses for fill and evacuate.
- . Comes complete with valve adapters for all valves (large bore and standard).
- . Gauges are protected.
- . Unit is portable or can be mounted in tire service trucks.
- . Double diaphragm pump, 1 to 1 ratio.
- . 10' hoses gives plenty of room to operate.
- . USA Made pump.

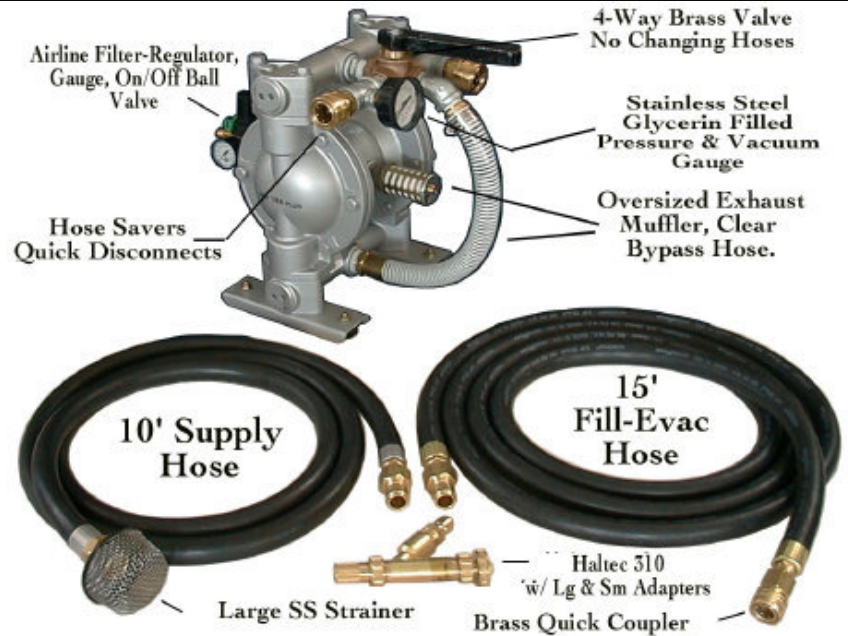

Part#
MTP30A

CALCIUM INJECTOR GUN & MOST FREQUENTLY REPLACED PARTS

Part#	Description
310	Calcium Inj. Gun Complete
FP135	Adapter for Standard Valve
FP137	Std Valve Core Remover
FP138	Ejector Union

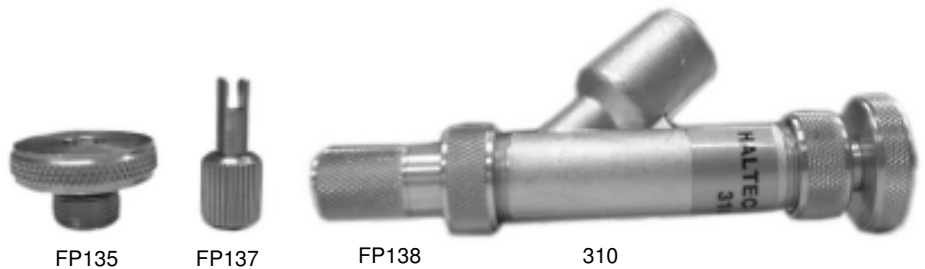

GIANT TIRE/OTR BEAD BREAKER

- Use on all 39", 45", 49" 51" and 63" wheel sizes
- In most cases you must first use Model 10105 or 10100 bead breaker to start the movement of the rim flange. The 10106 can then be used.
- Model 10502 or 10504 air/hydraulic pump is recommended for operation.
- Replaces Goodyear TO-2000-HA.



Part#
10103





BEAD BREAKERS




10101



10615



10106

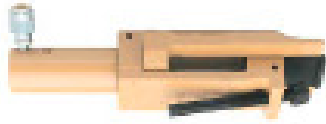


10100



10105



10104

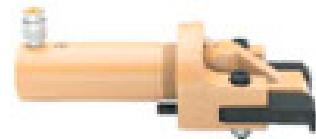

10103



10108



70160

10101 - "COMBI" BEAD BREAKER - Works on all single, two and three-piece truck tires/rims, including new style wheels. Breaks beads in seconds using 10,000 lbs. of force. The "Combi" Bead Breaker will not work on five-piece earth mover giant wheel/rim. Model 10100 or 10105 required. Similar to IMT-210 but has patented side straps which allow tool to be used on newer high flanged wheels. The 10200 kit contains 10101 bead breaker, 10500 pump and 10604 hose. The 10202 kit contains 10101 bead breaker, 10592 pump and 10604 hose assembly.

10615 - CONVERSION KIT FOR "COMBI" BEAD BREAKERS - Clamp will convert older bead breakers in order to fit new style wheels. Works on all brands of "Combi" bead breakers.

10106 - DUAL AGRICULTURAL TRACTOR TIRE BEAD BREAKER - Heavy duty 10 tons of force break the toughest beads. Breaks inside bead on outside dual farm tractor tires. Requires just 3" of operating space between dual tractor tires. No need to remove outside wheel to change tire on outside dual. Use with 10,000 p.s.i. air/hydraulic pump.

Compare ESCO model 10106 vs IMT-300

Item Ram Capacity Distance when closed Max. Width

10106 10 Tons 3" 24"

IMT-300 4 Tons 4-1/2" 12"

10100 - GIANT TIRE/EARTH MOVER BEAD BREAKER - Use on 5-piece rims 25" to 51" with pry bar/bead loosening pockets. 4-1/4" stroke, 13.8 ton ram will break the toughest beads. Same as IMT-1800. 10207 kit contains 10100 bead breaker, 10500 pump and 10604 hose assembly. 10209 kit contains 10100 bead breaker, 10592 pump and 10604 hose assembly. Use with any air/hydraulic pump.

10105 - EARTH MOVER TIRE BEAD BREAKER - Use on smaller 25" and 29" earth mover tire/wheel. 2-1/8" stroke, 10 ton ram easily breaks most beads. Replaces Goodyear TO-1600-HA. 10205 kit contains 10105 bead breaker, 10500 pump, and 10604 hose assembly. 10213 kit contains 10105 bead breaker, 10508 pump, and 10604 hose assembly.

10104 - GIANT TIRE/EARTH MOVER BEAD BREAKER - Use on 5-piece rims 25" to 51" without pry bar/bead loosening pockets. Replaces Goodyear TO-100-HA. Model 10212 kit contains 10104 bead breaker, 10508 hand pump and 10604 hose assembly.

10103 - GIANT TIRE/EARTH MOVER BEAD BREAKER - Use on all 39", 45", 51", 57" and 63" wheel sizes In most cases you must first use model 10105 or 10100 bead breaker to start the movement of the rim flange. The 10103 can then be used. Model 10594 or 10504 air/hydraulic pump recommended for operation. Replaces Goodyear TO-2000-HA. 10211 kit contains 10103 bead breaker, 10504 pump and 10602 hose assembly. 10210 kit contains 10103 bead breaker, 10594 pump and 10602 hose assembly.

10108 - BEAD PUSH OFF TOOL - Lightweight tool for removing combine and tractor tires after breaking the bead. Has a pushing force of 8,000 lbs. Has a 5.5" stroke. A removable handle for compact storage and uses hydraulic pressure to force the tire off the rim. The push off tool hooks between the rim and the tire bead. Same as IMT-150.

NEW 70160 - MANUAL BEAD BREAKER - Loosens tire bead from rim with leverage. Excellent for working on tire without removing the wheel from tractor. Will handle 38" and 42" 14-ply farm tractor and backhoe tires with drop center rims to small ATV and lawnmower tires. Operates with 1/2" drive impact wrench or ratchet wrench